


REV 04/23/07

READ THROUGH INSTRUCTIONS BEFORE BEGINNING. DO NOT FULLY TIGHTEN BOLTS UNTIL INSTRUCTED.

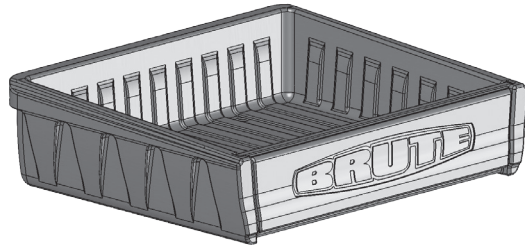

CLUB CAR PRECEDENT:

Cargo Bed: 84PRE Strut Kit: 84PRE SK

PROPRIETARY & CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DOCUMENT IS THE SOLE PROPERTY OF CUSTOM GOLF CAR SUPPLY. ANY REPRODUCTION IN PART OR AS A WHOLE, WITHOUT THE WRITTEN PERMISSION OF CUSTOM GOLF CAR SUPPLY IS PROHIBITED.


STEP 1: Prepare Car for Installation



Remove the following:

- top
- top supports/drain tubes
- bench back cushion
- bag rack assembly (NOTE: save original hardware for later use)

STEP 2: Install Seat Back Supports

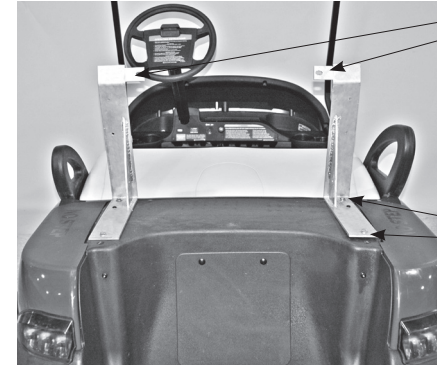

NOTE: The TABs on each seat back support should face to the inside.


3/8" x 1-1/2" Hex Bolt
3/8" Flat Washer
(2x Both Sides)

DO NOT FULLY TIGHTEN BOLTS

Install Seat Back Supports.

NOTE: Make sure TABs face to the inside.

STEP 3: Mount Cargo Bed Base

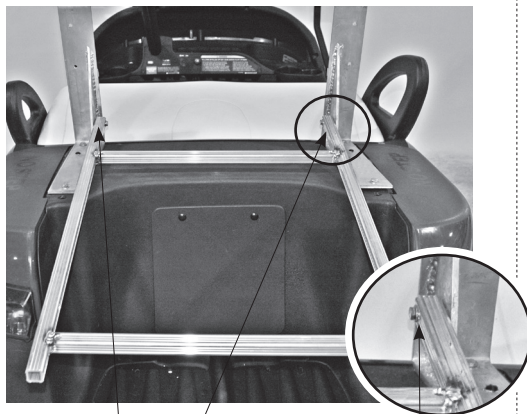

Cargo Bed H-frame Base

NOTE: Attach the H-frame to seat back supports. Use the end of H-frame that extends furthest past the cross bars and has a hole located 1/2 inch from end.

The H-frame will mount on the INSIDE of the seat back supports.


3/8 x 1-1/2 Hex Bolt
3/8 Washer (front)
3/8 Washer (back)
3/8 Nyloc Nut
(Both Sides)

DO NOT FULLY TIGHTEN

STEP 4: Attach Cargo Bed Upright Supports

Cargo Bed Supports

Mount on second hole from each outside edge of Bumper angle, making sure that the curve faces away from bumper angle.

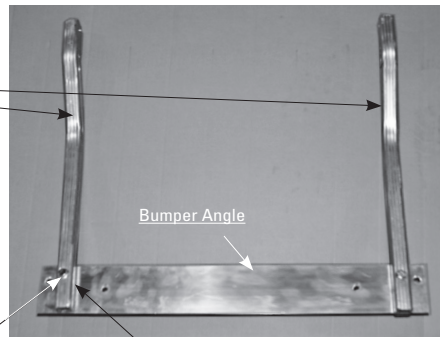


1/4" x 1-1/2" Hex Bolt
1/4" Flat Washer (front)
1/4" Flat Washer (rear)
1/4" Jam Nut
(Both Sides)

DO NOT FULLY TIGHTEN

Attach the cargo bed upright supports to the second hole from each outside edge of the Bumper Angle. Make sure the curved part of the supports face away from the Bumper Channel. Hand-tighten hardware only.


STEP 5: Attach Upright Supports to Cargo Bed H-frame

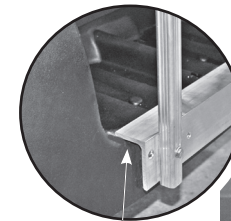

1) Rest the Bumper Angle/Cargo Bed Upright Support Assembly on top of the bumper.

1/4" x 2-1/2" HEX Bolt
1/4" Flat Washer (front)
1/4" Flat Washer (back)
1/4" Nyloc Nut
(Both Sides)

FULLY TIGHTEN

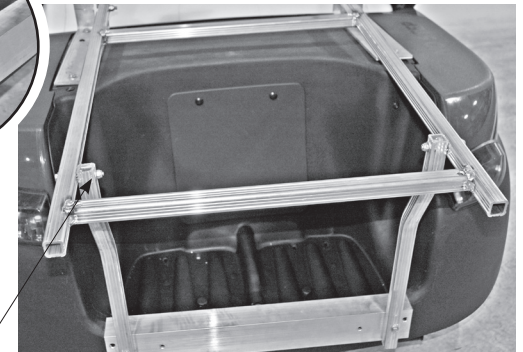

2) Attach each Upright Support to the INSIDE of the Cargo Bed H-frame.

NOTE: Do not attach bumper angle to car at this time.

REV 04/23/07

READ THROUGH INSTRUCTIONS BEFORE BEGINNING. DO NOT FULLY TIGHTEN BOLTS UNTIL INSTRUCTED.

STEP 6: Attach Strut Kit

(SKIP TO STEP 7, IF YOU'RE NOT REINSTALLING THE FACTORY TOP)



1) FULLY TIGHTEN SEAT BACK SUPPORT BOLTS (4)



2) Mount a Top Rear Strut to each seat back support.



Hardware Included With Strut Kit:

- 1/4" x 1-3/4" HEX Bolt
- 1/4" Flat Washer (front)
- 1/4" Flat Washer (back)
- 1/4" Nyloc Nut (2x Both Sides)

FULLY TIGHTEN

84PRE SK PC: For use with Precedent Factory top.

NOTE: Rear strut kits are NOT included with the cargo bed and must be purchased separately.

STEP 7: Mount Factory Seat Back

Use the factory hardware to mount factory seat back.



Mount the factory seat back to the seat back supports, using original factory hardware.

FULLY TIGHTEN

STEP 8: Reinstall Factory Top

(SKIP TO STEP 9, IF YOU'RE NOT REINSTALLING THE FACTORY TOP)




Use the factory hardware to mount factory top to front frame and to rain cups on 84PRE Strut Kit.

FULLY TIGHTEN ONCE ALL BOLTS

HAVE BEEN INSTALLED.

Mount the factory top to the front frame and rear struts, using original factory hardware.


STEP 9: Attach Bumper Angle to Car Bumper

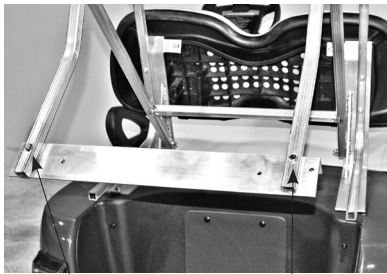

1) Lift cargo bed frame & bumper angle assembly off of bumper. Fully tighten bolts connecting the upright supports and the bumper angle.




2) Lower the cargo bed frame & bumper angle assembly, so that it is resting on bumper again. Make sure Bumper Angle is centered on car bumper. Using one of the two holes in the center of the Bumper Angle as a guide, use a 5/16" drill bit and drill completely thru the bumper. Install mounting hardware. Repeat for other remaining hole.

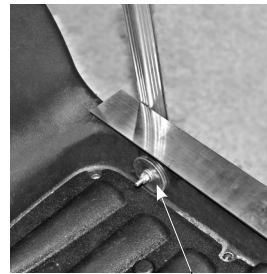

- 1/4" x 3" PHP Bolt (Pan Head Phillips)
- 1/4" Flat Washer (angle side)
- 2" Plate Washer (inside bumper)
- 1/4" Flat Washer (bumper side)
- 1/4" Nyloc Nut (Both Sides)

FULLY TIGHTEN ALL LOOSE BOLTS (INCLUDING ALL PREVIOUS STEPS, ESPECIALLY STEPS 3 & 5)

STEP 10: Mount Cargo Bed

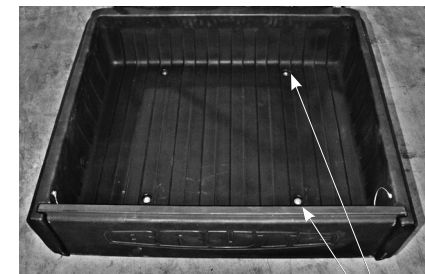

Align the four holes in cargo bed with the four holes in the H-frame. Mount cargo bed using stainless steel hardware on top.

- 5/16" x 3-1/4" SS HEX Bolt
- 1" SS Washer (top)
- 5/16" Flat Washer (bottom)
- 5/16" Nyloc Nut (bottom) (2x Both Sides)

FULLY TIGHTEN ALL BOLTS