

FACTORY PRECEDENT HIP RESTRAINTS



FACTORY PRECEDENT HIP RESTRAINT INSTALLATION

TABLE OF CONTENTS:

- Step 1** - Remove from Factory Car
- Step 2** - Mount Hip Restraints
- Step 3** - Mount Seat Brackets

REQUIREMENTS



Deluxe DoubleTake Cushions

SCALE HARDWARE GUIDE

Supplied hardware has been illustrated at a 1:1 scale for the ability to verify required lengths quickly and easily. Simply place the hardware on top of the illustration to ensure you are using the correct item and measurement.

STEP 1 REMOVE FROM FACTORY CAR


To Install the Factory Precedent Hip Restraints on a Deluxe Front Seat cushion, remove & transfer the Factory Hip Restraints & the Hardware from the factory car.



STEP 2 MOUNT HIP RESTRAINTS


Mount Hip Restraints using the Hardware from the factory car. Repeat for opposite Hip Restraint.

NOTE: The slope of the Hip Restraint always faces the front of the car.

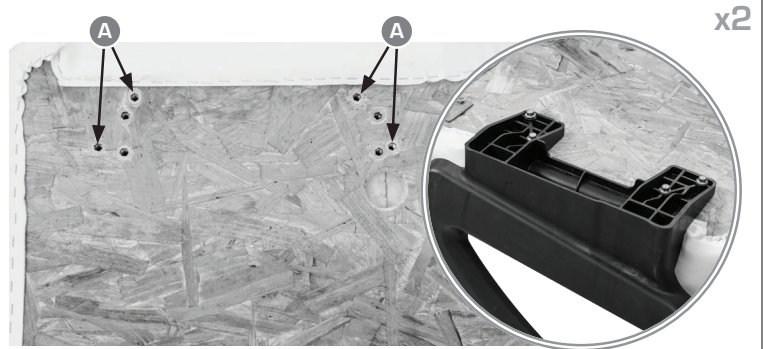


STEP 3 MOUNT SEAT BRACKETS

Mount the Factory Seat Brackets using the hardware provided.
NOTE: Use the Large Washer on the Rear Hole.

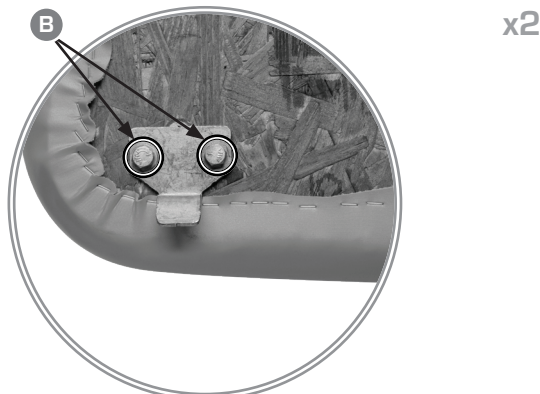

HARDWARE - SCALE 1:1

A x8

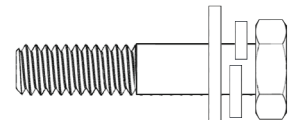

1/4" X 1-1/2" Hex Bolt - 1/4" Lock Washer - 1/4" Flat Washer

FACTORY HARDWARE

B x4

Reuse Factory Hardware from Factory Car